



DAIKIN ROOM AIR CONDITIONER

INSTALLATION MANUAL

R410A Split Series



MODELS

FVXG25K2V1B

FVXG35K2V1B

FVXG50K2V1B

CE - DECLARATION OF CONFORMITY
CE - KONFORMITÄTSEKLERUNG
CE - DECLARATION DE CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-O-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СОБЛЕТВІИ
CE - OVERENSSTEMELSEERKLARING
CE - FÖRSÄKRAN-OM-OVERENSTEMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUUDESTA
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARATIE-DE-CONFORMITATE

CE - IZJAVA-O-USKLADNOSTI
CE - MEGFELELŐSÉGI-NYILATKOZAT
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARATIE-DE-CONFORMITATE

CE - IZJAVA-O-SKLADNOSTI
CE - VASTAUSDEKLARATSIOON
CE - ДЕКЛАРАЦІЯ-ЗА-СЬОБВЕТСТВІЕ
CE - YIGUNLUK-BETANI

CE - ATTIKTES-DEKLARACIA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHASENIE-ZHODY
CE - YIGUNLUK-BETANI

Daikin Industries Czech Republic s.r.o.

- 01 **GB** declares under its sole responsibility that the air conditioning models to which this declaration relates:
02 **D** erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
03 **F** déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
04 **NL** verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
05 **E** declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 **I** dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
07 **GR** δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν των κλιματιστικών ορυκτωών στο οποίο αναφέρεται η παρούσα δήλωση:
08 **P** declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

FVXG25K2V1B, FVXG35K2V1B, FVXG50K2V1B, FVXG25K2V1B, FVXG35K2V1B, FVXG50K2V1B,

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entsprechend/sprechen, unter der Voraussetzung, daß sie gemäß unserer Anweisungen eingesetzt werden.
03 sont conformes à l/aux norm(e)(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi alle/i seguente(i) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni.
07 είναι σύμφωνα με το/α ακόλουθ(α) πρότυπο(α) ή άλλο (άλλα) έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
08 **EN60335-2-40**.
09 following the provisions of:
10 gemäß den Vorschriften der:
11 enligt villkoren i:
12 gitt i henhold til bestemmelserne i:
13 overeenkomstig de bepalingen van:
14 za dovoření ustanovení předpisu:
15 prema odredbama:
16 követi azt):
17 zgodnie z postanowieniami Dyrektywy:
18 in uma prevedilor.

- 01 **Note** * as set out in and judged positively by
da secondo il Certificato :
02 **Hinweis** * wie in aufgeführt und von positiv beurteilt gemäß Zertifikat :
03 **Remarque** * tel que défini dans et évalué positivement par conformément au Certificat :
04 **Bemerk** * zoals vermeld in en positief beoordeeld door overeenkomstig het Certificat :
05 **Nota** * como se establece en y es valorado positivamente por de acuerdo con el Certificato :
06 **Nota** * как указано в и в соответствии с положительным решением согласно сертификату :
07 **Заметка** * как определено в и оценено положительно от в соответствии с сертификатом :
08 **Notă** * la fel cum este stabilit în și apreciat pozitiv de în conformitate cu Certificatul :
09 **Poznamka** * kot je obloženo v in pozitivno zjeleno v skladu s certifikatom :
10 **Bemerk** * kaip išdėstyta ir teigiamai įvertinta iš pagal sertifikato :
11 **Información** * enigi och godkants av enligt Certifikat :
12 **Merk** * som deltekommunikat i og gennem positiv bedømmelse af følger **Sertifika** :
13 **Huom** * jolla on esitetty asiakirjassa ja jolla on hyväksynyt **Sertifikaatin** mukaisesti.
14 **Poznamka** * jak bylo ocenjeno v a pozitivno zjeleno v skladu s **osvedčením** :
15 **napomena** * kako je zloženo u i pozitivno ocijenjeno od strane prema **Certifikatu** :
16 **Megjegyzás** * az/ alapján a/ igazolta a megjelölt, az/ tanúsítvány szerint.
17 **Uvaga** * zgodnie z dokumentacją pozytywną opinią i **Swiadectwem** :
18 **Nota** * as set cum este stabilit în și apreciat pozitiv în conformitate cu **Certificatul** :
19 **Opomba** * kot je obloženo v in pozitivno zjeleno v skladu s **osvedčením** :
20 **Märkus** * nagu on näidatud dokumentis ja teals kiidulul järgi vastavalt **sertifikaadile** :
21 **Забелюшка** * картото е издано в и оценено положително от съгласно **Сертификата** :
22 **Pasiba** * kaip nustatyta ir kaip teigiamai nuspresta pagal **Sertifika** :
23 **Paziņoms** * ka norādīts un atbilstoš pozitīvajam vērtējumam saskaņā ar **sertifikātu** :
24 **Poznamka** * ako bilo ocenjeno v a pozitivno zeleno v skladu s **osvedčením** :
25 **Not** * la beilīdzīgi gīt ve **Sertifikata** gīre parārdzinot ūdmu darak tēģelēndīgi gībi.

- 13** DIC2*** on valitultettu laailmaan Teknisen asiantijan.
14** Spjedenost DIC2*** mš opravljen le kompiaz souoru tehnicke konstitucije.
15** DIC2*** je ovlašten za izradu Databele o tehnicke konstituciji.
16** ADIC2*** joposust i miszaki konstituciois dokumentacii oszszallastara.
17** DIC2*** je upovazhenie do zberania i opracovvania dokumentacii konstitucijnej.
18** DIC2*** este autorizat sa complice Dosarul tehnic de constructie.

- 13** H DIC2*** évi északodómjén va ovitvitéi to/ Teyvno gőczok közpöszűj.
08** A DIC2*** está autorizada a compilar a documentación técnica de fabrico.
09** Kompanie DIC2*** ynopomozna cötravim Komitet tehnickeoi pomyenakim.
10** DIC2*** er autoriseret til at udarbejde de tekniske konstruktionsdata.
11** DIC2*** er berovrigde at sammanställa den tekniska konstruktionsfilen.
12** DIC2*** har tillatelse til å kompilere den Tekniska konstruktionsfilen.

- 07** H DIC2*** évi északodómjén va ovitvitéi to/ Teyvno gőczok közpöszűj.
08** A DIC2*** está autorizada a compilar a documentação técnica de fabrico.
09** Kompanie DIC2*** ynopomozna cötravim Komitet tehnickeoi pomyenakim.
10** DIC2*** er autoriseret til at udarbejde de tekniske konstruktionsdata.
11** DIC2*** er berovrigde at sammanställa den tekniska konstruktionsfilen.
12** DIC2*** har tillatelse til å kompilere den Tekniska konstruktionsfilen.

***DIC2 = Daikin Industries Czech Republic s.r.o.



Tetsuya Baba
Managing Director
Pilsen, 3rd of July 2017

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.
U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany,
Czech Republic

3P475203-10C

- 09 **GB** заявляет, коллективно под своей ответственностью, что модели кондиционеров воздуха, к которым относится настоящее заявление:
10 **GB** erklærer under enensvar, at klimaanlægmodelerne, som denne deklaration vedrører:
11 **S** deklarerer i egenkap og huudensvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration inärar att:
12 **NL** erklærer i uienberdig ansvr for at de luftkonditioneringsmodeller som berörs av denne deklarasjon, inderbeet at:
13 **GB** imottaa yhteisnimen omalla vastuullaan, että laiman ilmoituksen tarkoituksena ilmoitettailleten mallit:
14 **GB** prohlásuje ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
15 **GB** izjavlja pod isključivo vlastitom odgovornošću da su modeli klima uređaja na koje se ova izjava odnosi:
16 **H** teljes felelőssége tudatában kijelenti, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik:

- 08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям.
10 overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:
11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att anvisning sker i överensstämmelse med våra instruktioner.
12 respektive dštyr er i överensstämmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning af at disse bruges i henhold til vore instrukser:
13 vastavast searavien standardien ja muiden ohjeistettien dokumenttien vaatimuksia edellytettien, että mitä käytettään ohjeidemme mukaisesti:
14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 i skladu sa sijedinstvenim standardom(im) ili drugim normativnim dokumentom(im)a, uz uvjet da se oni koriste u skladu s našim uputama:

- 01 Directives as amended.
02 Direktiven, gemäß Änderung.
03 Directives, telles que modifiées.
04 Richtlijnen, zoals geamendard.
05 Direktivas, según lo emendado.
06 Direktive, come da modifica.
07 Öbnyv, ömvs éyav gnomotörfeli.
08 Direktivas, conforme alteração em.
09 Direktiva cu viziui pozdravami.
21 **Забелюшка** * картото е издано в и оценено положително от съгласно **Сертификата** :
22 **Pasiba** * kaip nustatyta ir kaip teigiamai nuspresta pagal **Sertifika** :
23 **Paziņoms** * ka norādīts un atbilstoš pozitīvajam vērtējumam saskaņā ar **sertifikātu** :
24 **Poznamka** * ako bilo ocenjeno v a pozitivno zeleno v skladu s **osvedčením** :
25 **Not** * la beilīdzīgi gīt ve **Sertifikata** gīre parārdzinot ūdmu darak tēģelēndīgi gībi.

Low Voltage 2014/35/EU Electromagnetic Compatibility 2014/30/EU * Machinery 2006/42/EC **

- 17 **GB** deklaruje na własną i wyłączną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja:
18 **GB** decal pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație:
19 **GB** z svo odgovorností izjavlja, da so modeli klimatiskih naprav, na katere se izjava nanaša:
20 **GB** kinnblátt omata litaðiku vastuðusel, et læsoðvera deklaraðarönn alla kluvalað klímaseðarinnale muelðil:
21 **GB** deklaruje na svoa otvopnost, že modelne klimatiznaia inštalacija, za koto se omdaia tazi deklaracija:
22 **GB** vyškla savo atsakomybę šelia, kad oro kondicionavimo priedais, modeliai, kuriems yra taikoma ši deklaracija:
23 **GB** ar plilu atbildību apliecinu, ka šieki izskaido modeļu gaisa kondicionēšai, uz kuriem attiecas šī deklarācija:
24 **GB** vyhlazuje na vlastnu zodpovednost, že tieto klimatizačné modely, na ktoré sa vzťahuje toto vyhlásenie:
25 **GB** izaneme kendi sonumluluğunda ölmak üzere bu bildirimi ilgili öðüğü klima modellerini aşğıdaki gibi öðuluğum beyan eder:

- 16 megjelének az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírtas szerint használják
17 spełniać wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:
18 sunt în conformitate cu următor (următoare) standard(e) (sau alte) documente (normative), cu condiție ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
19 skldni z naslednjim standardi in drugi normativi, pod pogojem, da se uporabljajo skladu z našimi navodili:
20 on vastavusse järgmistele standarditele või teade normatiivete dokumentidele, kui need kasutatakse vastavalt meie juhendile:
21 соответстат на следящие стандарты или други нормативни документи, при условии, че се използват съгласно нашите инструкции:
22 atlitika žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
23 tad, ja leioti atbilstošā norādījumiem, atbilst sekojošiem standartiem un citiem normatīviem dokumentiem:
24 su i z našim odgovornosti (norma) (am) i drugim normativni (i) dokumentom (am), za predpokladu, že se používají v sulaie s našim návodem:
25 üritun, talmlatrimizna gēre kulan linasi loşuluja aşğıdaki standartlar ve norm beiliten beğelerile uyumludur:

- 19 Direktive z vsemi spremembami.
20 Direktivd koos muudatistega.
21 Директиви с ревизије изменења.
22 Direktiyoise su paglupymas.
23 Direktiivā, salastina kun ne oval muudetuna.
14 v platēm ziņā.
15 Smeņicē, kako je izmēņijero.
24 Smerice, v plānotom zmeņi.
25 Bēģstīlmis haleriye Yordemlemler.
17 z počnejšijim popravkami.
18 Direktivier, cu amendamentele respective.
kartoto e izdano v i oceneno pozitivno ot saskaņo **Sertifika** :
kap nustatyta ir kaip teigiamai nuspresta pagal **Sertifika** :
ka norādīts un atbilstoš pozitīvajam vērtējumam saskaņā ar **sertifikātu** :
ako bilo ocenjeno v a pozitivno zeleno v skladu s **osvedčením** :
 la beilīdzīgi gīt ve **Sertifikata** gīre parārdzinot ūdmu darak tēģelēndīgi gībi.

<A>	DAIKIN.TCF.015R34/06-2017
	DEKRA (NB0344)
<C>	74736-KRQ/EMC97-4957

- 19** DIC2*** je problaščen za sestavo databele s tehnično mapo.
20** DIC2*** on volitulu kostana tehništi dokumentašioni.
21** DIC2*** e otvopaznara da ostarav Artra sa tehnickeoi konstitucijom.
22** DIC2*** yra galbota sudaryti iš technines konstrukcijos failų.
23** DIC2*** ir autorizės sastadii tehniško dokumentašio.
24** Spjedenost DIC2*** je opravlēna vyvotit šibor tehnicke konstitucije.
25** DIC2*** Teknik Yapı Dosyasını derlemeye yetkilidir.

Safety Precautions

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- Meaning of WARNING and CAUTION notices

 **WARNING**Failure to follow these instructions properly may result in personal injury or loss of life.

 **CAUTION**Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- The safety marks shown in this manual have the following meanings:

 Be sure to follow the instructions.	 Be sure to establish an earth connection.	 Never attempt.
---	---	--

- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.
- The English text is the original instruction. Other languages are translations of the original instructions.

 WARNING		
• Ask your dealer or qualified personnel to carry out installation work. Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.		
• Install the air conditioner in accordance with the instructions in this installation manual. Improper installation may result in water leakage, electric shocks or fire.		
• Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.		
• Install the air conditioner on a foundation strong enough to withstand the weight of the unit. A foundation of insufficient strength may result in the equipment falling and causing injury.		
• If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.		
• Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only. Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.		
• Use a cable of suitable length. Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.		
• Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal connections or wires. Improper connections or securing of wires may result in abnormal heat build-up or fire.		
• When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened. Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.		
• If refrigerant gas leaks during installation, ventilate the area immediately. Toxic gas may be produced if the refrigerant comes into contact with fire.		
• After completing installation, check for refrigerant gas leakage. Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.		
• When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R410A). The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.		
• During installation, attach the refrigerant piping securely before running the compressor. If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.		
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.		
• Be sure to earth the air conditioner. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.		
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.		











 CAUTION		
• Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out.		
• While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation. Improper drain piping may result in indoor water leakage and property damage.		

Safety Precautions

- Tighten the flare nut according to the specified method such as with a torque wrench.
If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.
- Note that operation will restart automatically if the main power supply is turned OFF and then back ON again.
- Sound pressure level is less than 70dB(A).

Accessories

Indoor unit (A) – (K)

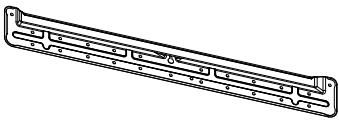(A) Mounting plate 	1	(E) Wireless remote controller 	1	(J) Operation manual 	1
(B) Titanium apatite deodorizing filter 	2	(F) Remote controller holder 	1	(K) Installation manual 	1
(C) Drain hose 	1	(G) Dry battery AAA. LR03 (alkaline) 	2		
(D) Insulation sheet (1) 	2	(H) Insulation sheet (2) 	1		

Only use accessories, optional equipment spare parts made or approved by Daikin.

Choosing an Installation Site

- Before choosing the installation site, obtain user approval.

1. Indoor unit

- The indoor unit should be sited in a place where:
 - 1) the restrictions on installation specified in the indoor unit installation drawings are met,
 - 2) both air inlet and air outlet have clear paths met,
 - 3) the unit is not in the path of direct sunlight,
 - 4) the unit is away from the source of heat or steam,
 - 5) there is no source of machine oil vapour (this may shorten indoor unit life),
 - 6) cool (warm) air is circulated throughout the room,
 - 7) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may shorten the remote controller range,
 - 8) the unit is at least 1 m away from any television or radio set (unit may cause interference with the picture or sound),
 - 9) no laundry equipment is located,
 - 10) there is a wall that can bear the weight of the indoor unit adequately.

2. Wireless remote controller

- Turn on all the fluorescent lamps in the room, if any, and find the site where remote controller signals are properly received by the indoor unit (within 7 m).


Installation Tips

1. Removing and installing front panel


• Removal method

- 1) Slide the front panel stoppers on both sides upward, and open the front panel.

- 1 Front panel stopper
- 2 Upward

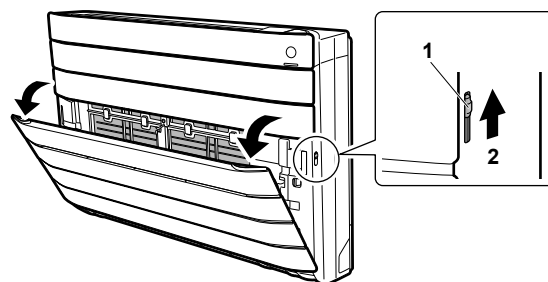


- 2) Remove the strings on both sides from the hooks.
- 3) Lift the front panel to remove it.

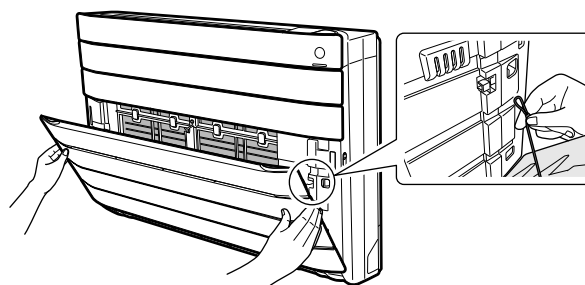


• Installation method

- 1) Hang the hooks (3 positions) on the lower section of the front panel.
- 2) Hang the strings on both sides on the hooks, and close the front panel.

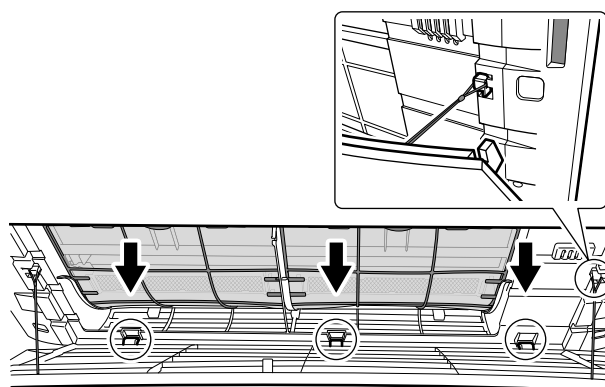

- 3) Slide the front panel stoppers on both sides downward, and secure the front panel.

- 1 Front panel stopper
- 2 Downward

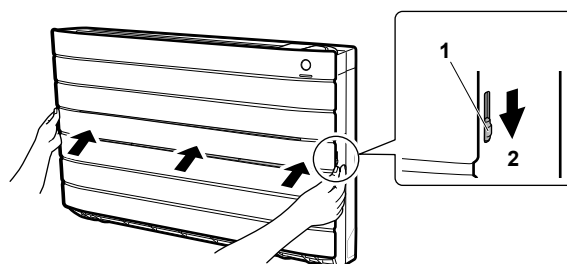


Installation Tips

2. Removing and installing air filters

• Removal method

- 1) Open the front panel.
- 2) Remove both air filters (upper).
- 3) Remove both air filters (lower).

- 1 Air filter (lower)
- 2 3) Pull up
- 3 Air filter (lower)
- 4 3) Pull down
- 5 1) Open

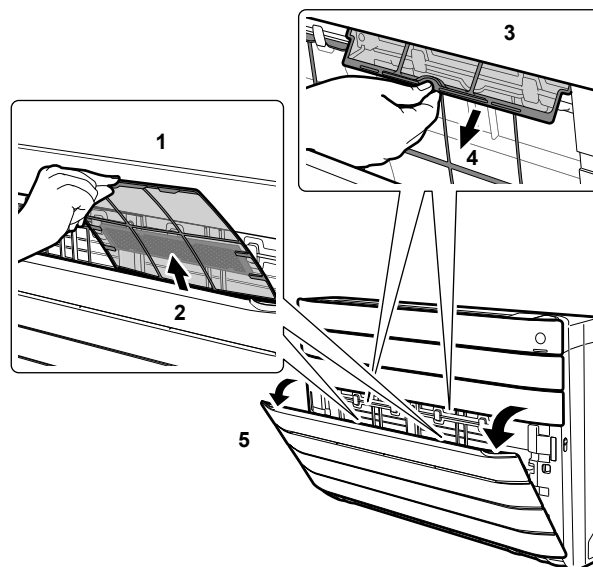


• Installation method

Using the reverse order from the removal, install the air filters (lower), and then install the air filters (upper).

3. Removing and installing front grille


• Removal method

- 1) Remove the front panel and air filters.
- 2) Remove the front grille fixing screws (5 pcs.).

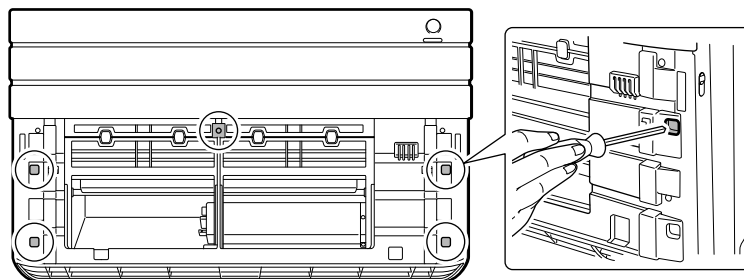


- 3) Pull the front grille to remove it.

- 1 Tab

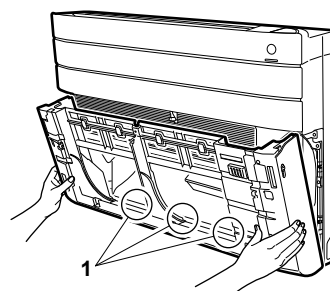

• Installation method

Hang the hooks on the lower section of the front grille, and then install the front grille. Tighten the fixing screws (5 pcs.).

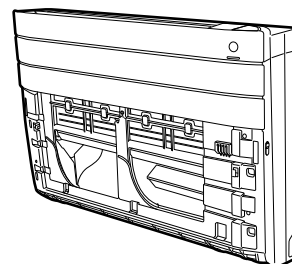

⚠ CAUTION


- Install the front grille so as not to leave any gap with the joint on the side of the air conditioner.

Installation Tips

4. How to set the different addresses


When two indoor units are installed in one room, the two wireless remote controllers can be set for different addresses.

- 1) Remove the front panel, air filters and front grille.
- 2) Remove the service lid screw (1 pc.), and then remove the service lid.
- 3) Remove the harness for the fan motor connection and harness for the motor valve coil connection.
- 4) Remove the 3 screws, and take out the terminal block and electrical wiring box.

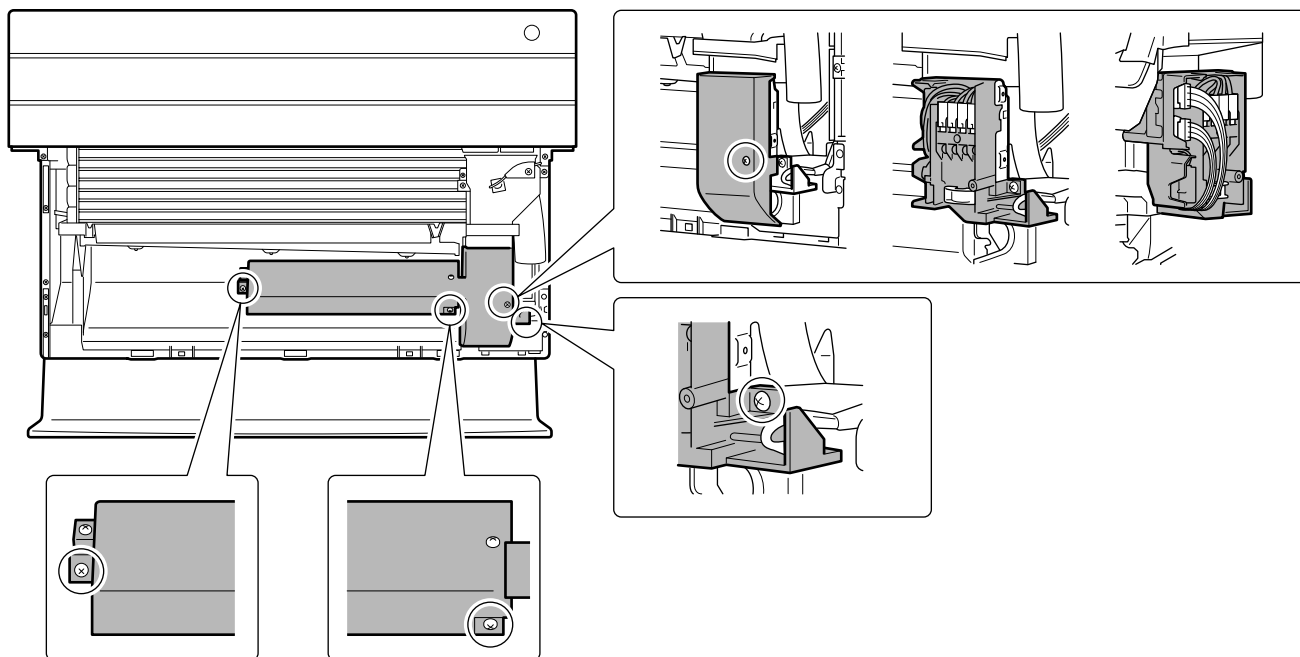

- 5) Switch the DIP switch (SW2-1) in the electrical equipment box to "ON".
- 6) Cut the address jumper in the remote controller.


- 1 DIP switch
- 2 Remote controller
- 3 Jumper
- 4 Address

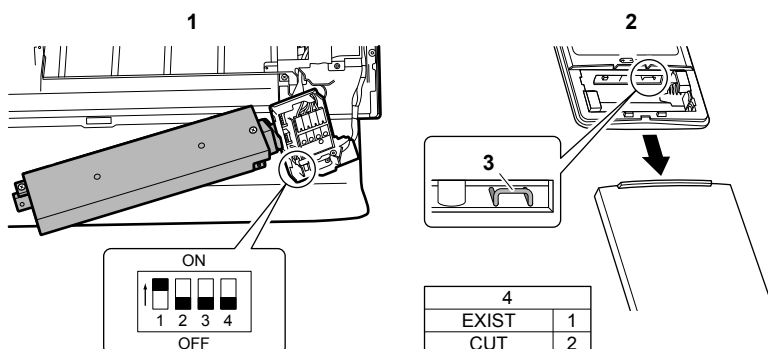


Installation Tips

5. When connecting to an HA system


- 1) Take out the terminal block and electrical wiring box, and open the lid for the electrical wiring box.
- 2) Remove the 2 screws, and open the lid for the electrical wiring box.

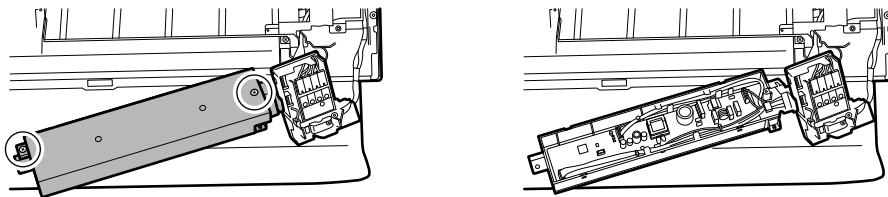


- 3) Attach the connection cord to the S21 connector and pull the harness out through the notched part in the figure.
- 3-1 Remove a fixing screw (1).

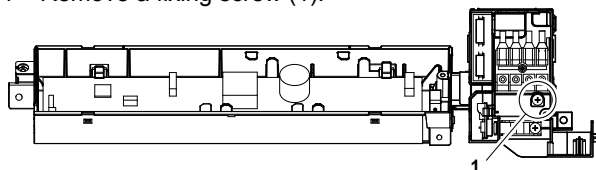


- 3-2 Remove the tabs (3 positions) and detach the terminal block.

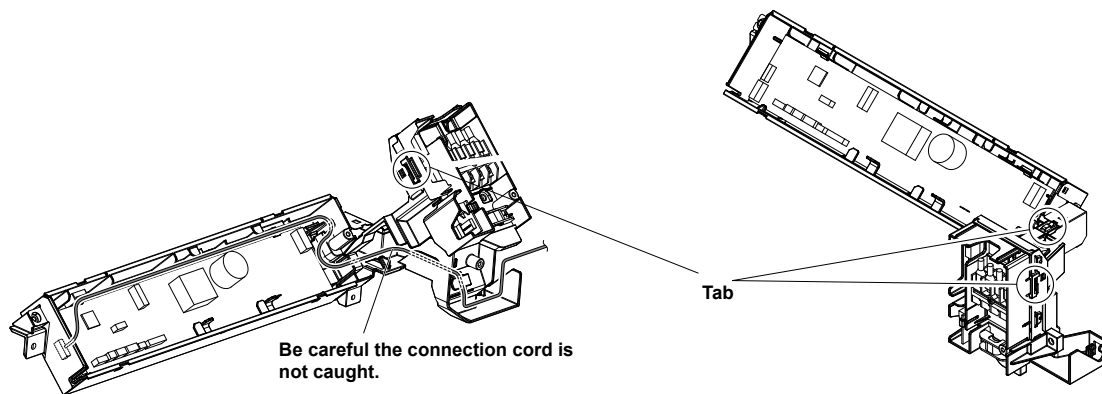

- 3-3 Connect the connection cord to the S21 connector and pull it through as shown.

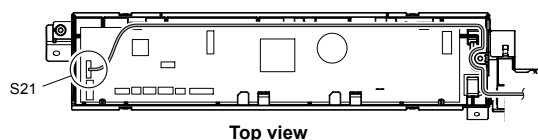



- 4) Pull the harness around, as shown in the figure, and replace a fixing screw as it was.

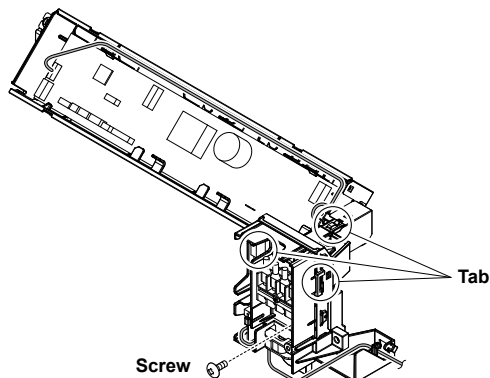

- 5) Replace the electrical wiring cover as it was.

Indoor Unit Installation Patterns

- The indoor unit can not be installed at a position where it directly comes in contact with the floor.
- There are two installation patterns shown below as a standard installation specification of the indoor unit.
- Be sure to install the indoor unit on a wall that can bear the weight of the unit adequately for any installation pattern.

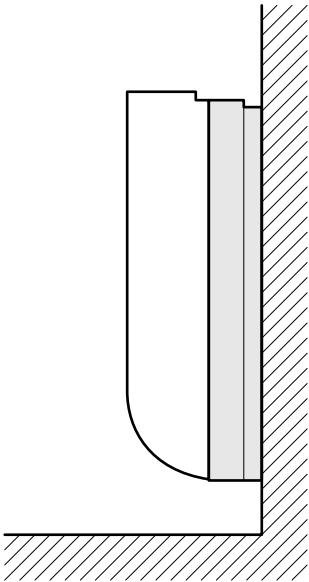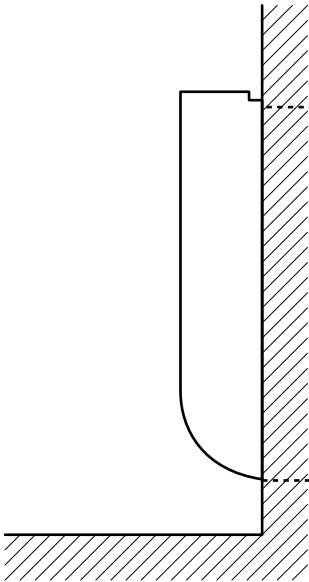
Exposed installation	Half concealed installation
	• For half concealed installation, please refer to page 21 and 22. 

CAUTION

• Firmly secure the unit to the wall so that a gap does not form between the back of the unit and the wall.

Indoor Unit Installation Drawings


- Be sure to install the indoor unit in accordance with the installation instructions below for any installation pattern.
- Install the indoor unit where there is no obstacle above the unit. Obstacles affect the air current distribution, and an adequate heating or cooling effect cannot be obtained.

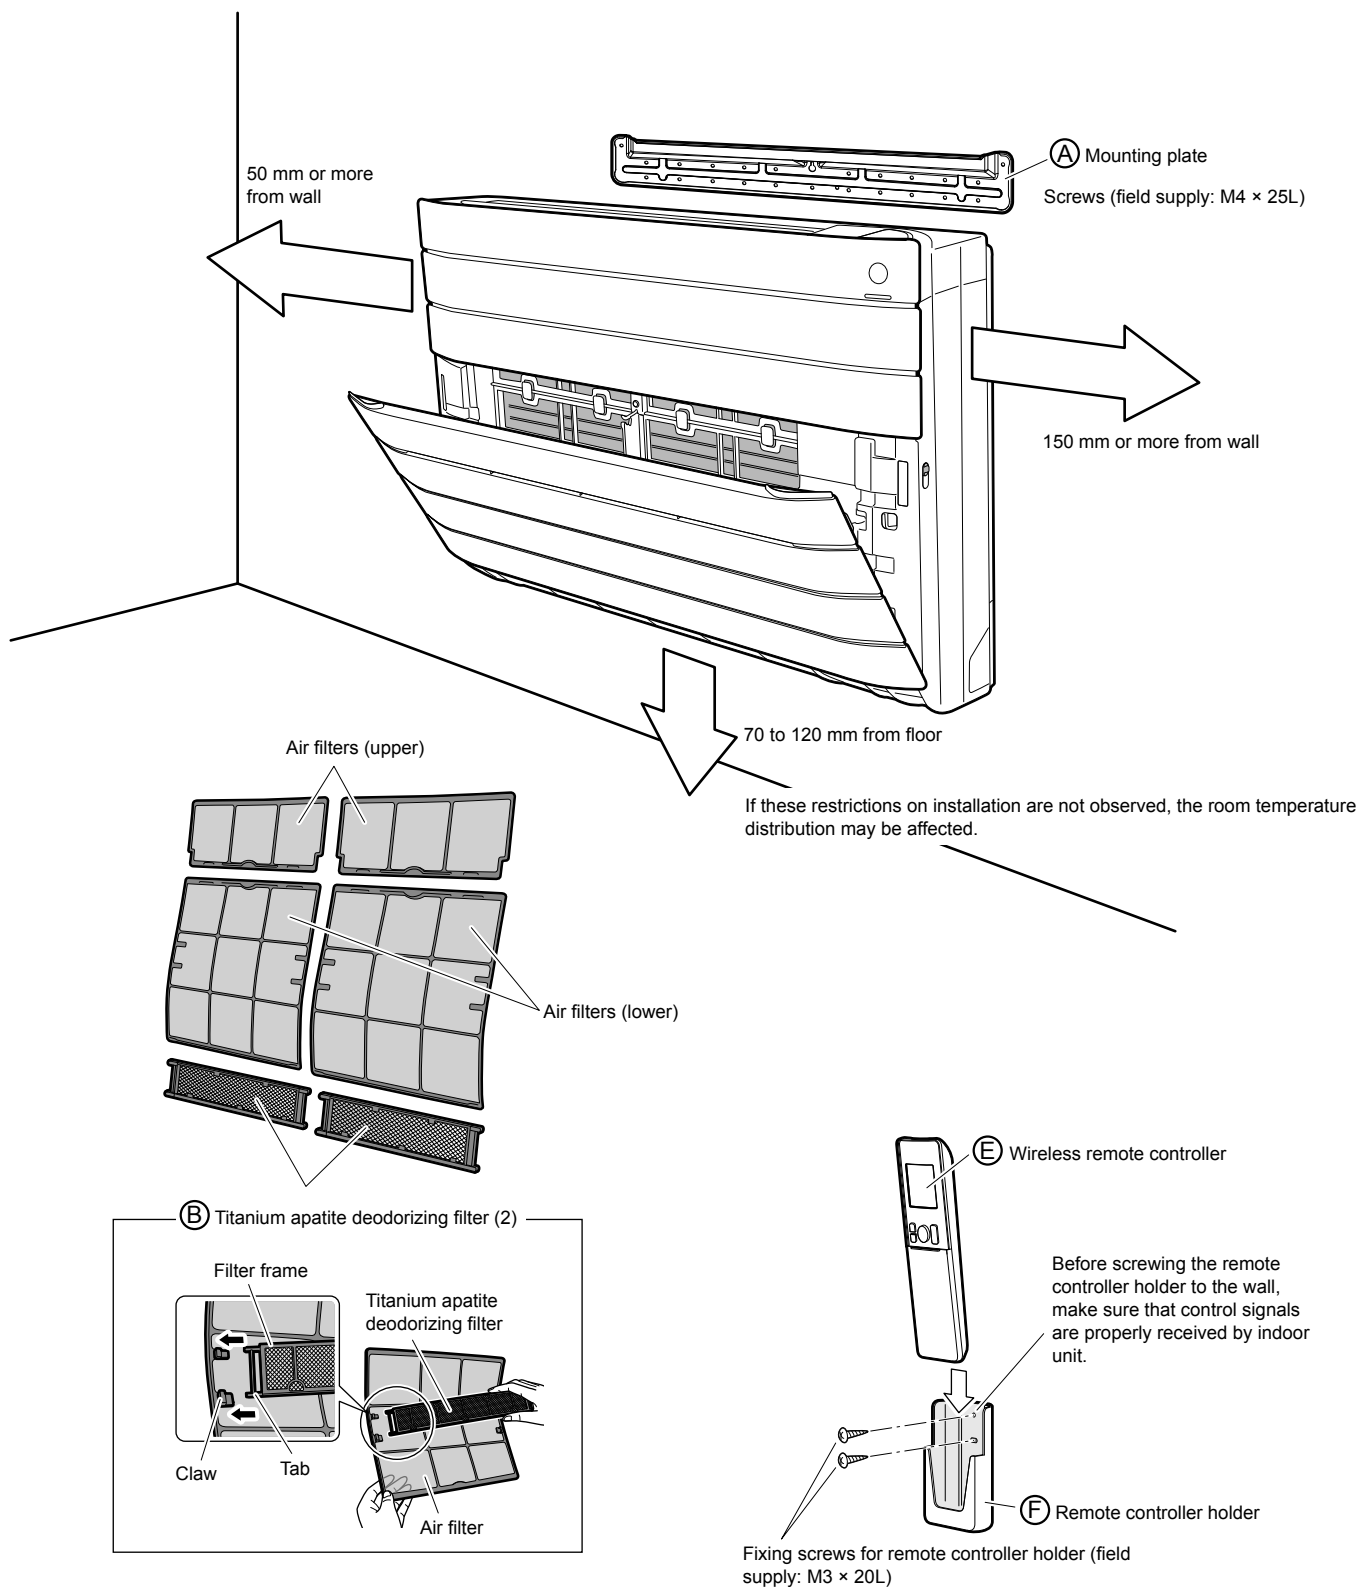

Indoor Unit Installation


2. Refrigerant piping

- Create a hole in the refrigerant piping in accordance with the conditions shown in the illustration.
- The location of the hole is different depending on which side of the pipe is taken out.
- Allow space around the pipe for an easier indoor unit pipe connection.
- Maintain an adequate working length for the refrigerant pipe starting from the reference point, as shown in the illustration.

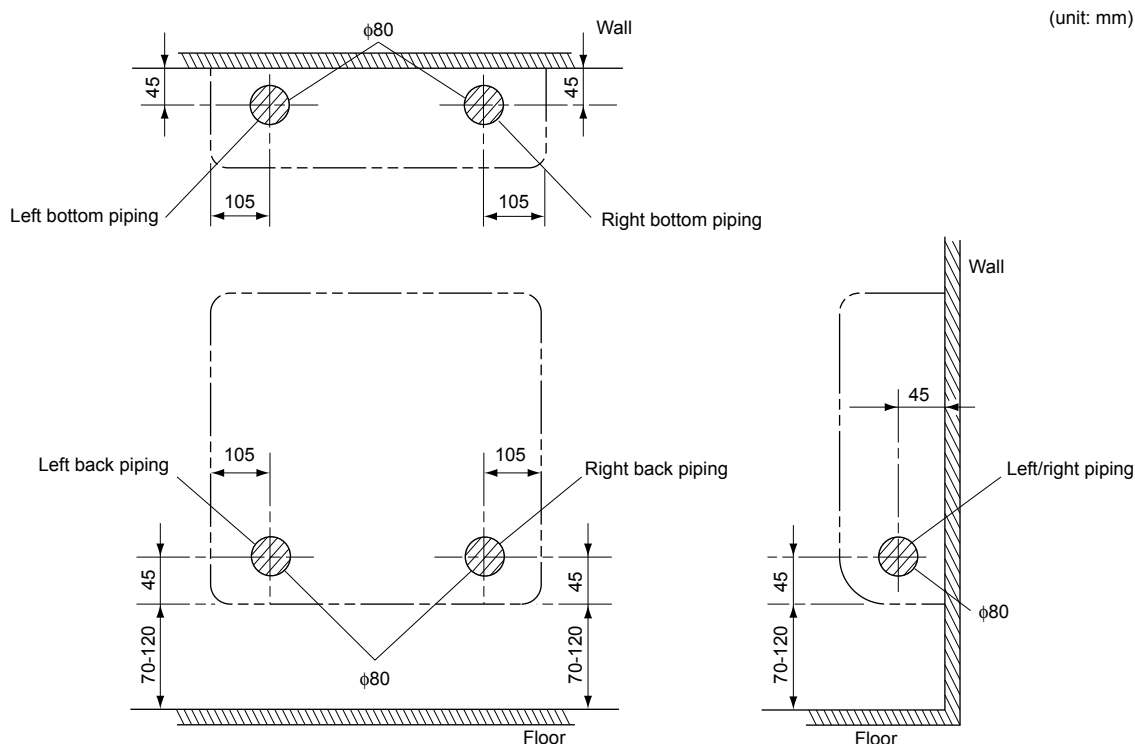

3. Installing wall embedded pipe

- For walls containing metal frame or metal board, be sure to use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.
- Be sure to caulk the gaps around the pipes with caulking material to prevent water leakage.
 - 1) Bore a feed-through hole of 80 mm in the wall so it has a down slope toward the outside.
 - 2) Insert a wall pipe into the hole.
 - 3) Insert a wall cover into wall pipe.
 - 4) After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty.

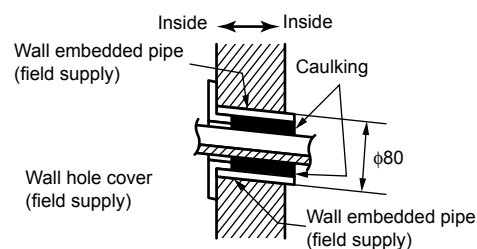


Indoor Unit Installation


4. Shaping the refrigerant pipe

- Form the shape of the refrigerant pipe in accordance with the restrictions shown in the illustration.
- Protect the open end of the pipe against dust and moisture.


- 1 Rain
- 2 Wall
- 3 Be sure to place a cap.
- 4 If no flare cap is available, cover the flare mouth with tape to keep dirt or water out.

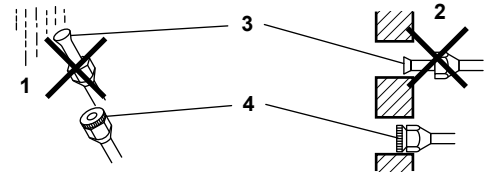

Piping pull-out dimensions

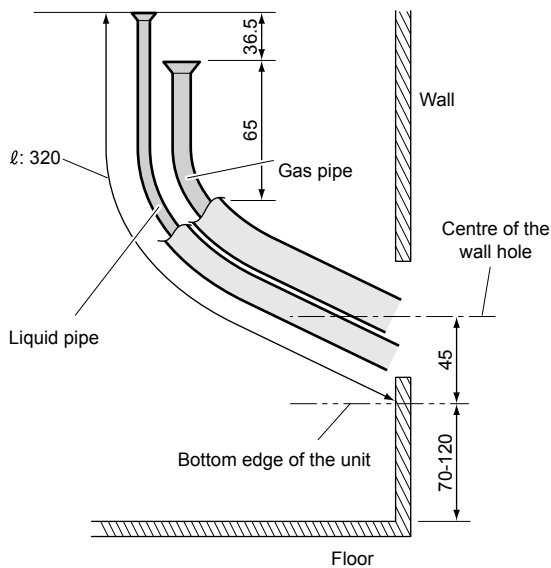

These dimensions are for reference. Please adjust them according to the conditions at the installation site.

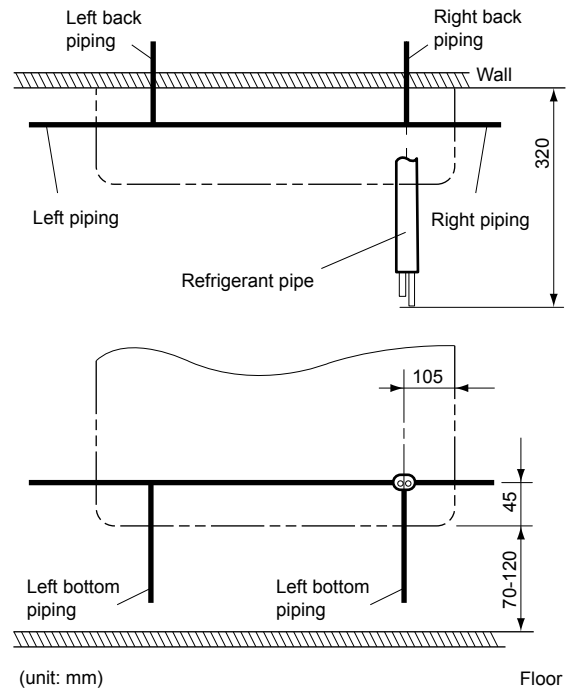

(unit: mm)

Floor

CAUTION


Min. allowable length

- The suggested shortest pipe length is 2,5 m, in order to avoid noise from the outdoor unit and vibration.
(Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)
- See the installation manual for the outdoor unit for the maximum pipe length.
- For multi-connections, see the installation manual for the multi-outdoor unit.

Indoor Unit Installation


5. Installing the indoor unit on the mounting plate

- 1) Remove the front panel and front grille.
- 2) Insert the ③ drain hose into the socket of the drain pan. Fully insert the drain hose until it adheres to a seal of the socket.

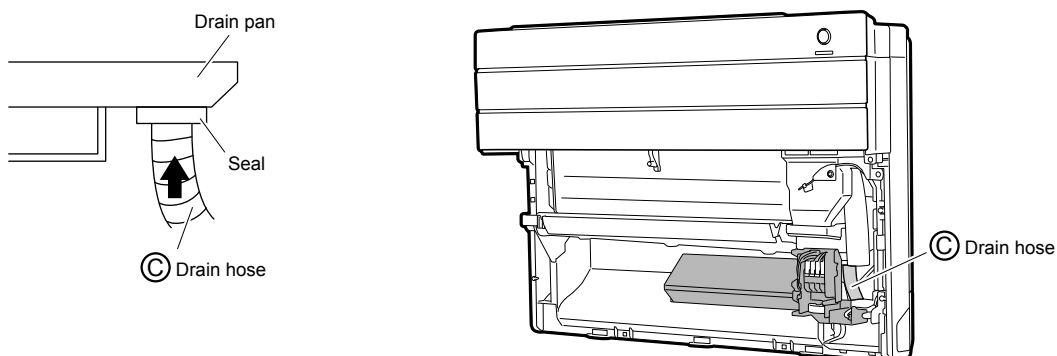


For side piping

- Before performing the side piping work, remove the pipe port cover on the side the pipe is routed.
 - 1) Open the screw covers on both sides of the air outlet cover using a flathead screwdriver.
 - 2) Remove the fixing screws (2 pcs.) from the air outlet cover.
 - 3) There is a service lid on the right side of the air outlet cover. Remove the screw, and open the service lid.
 - 4) Remove the harness from the receiver.




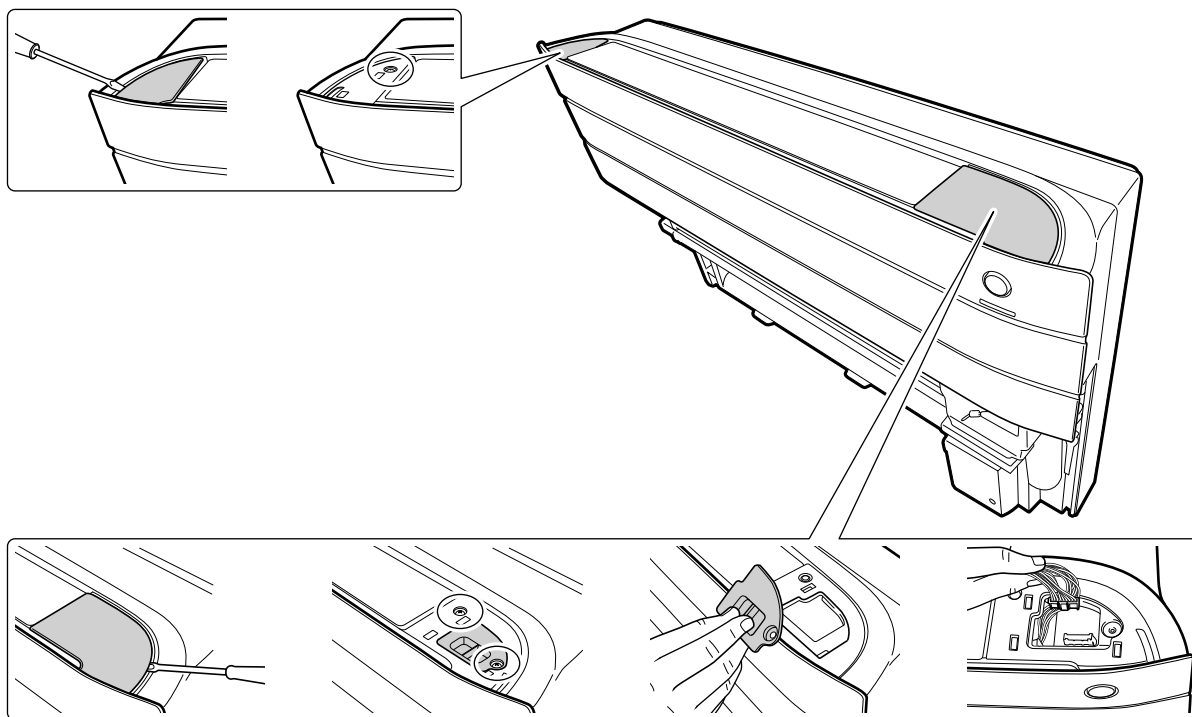


Indoor Unit Installation

5) Open the flap.

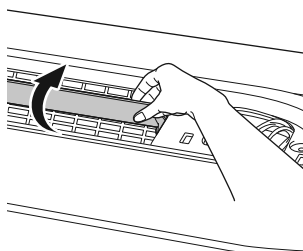

6) Remove the air outlet cover.

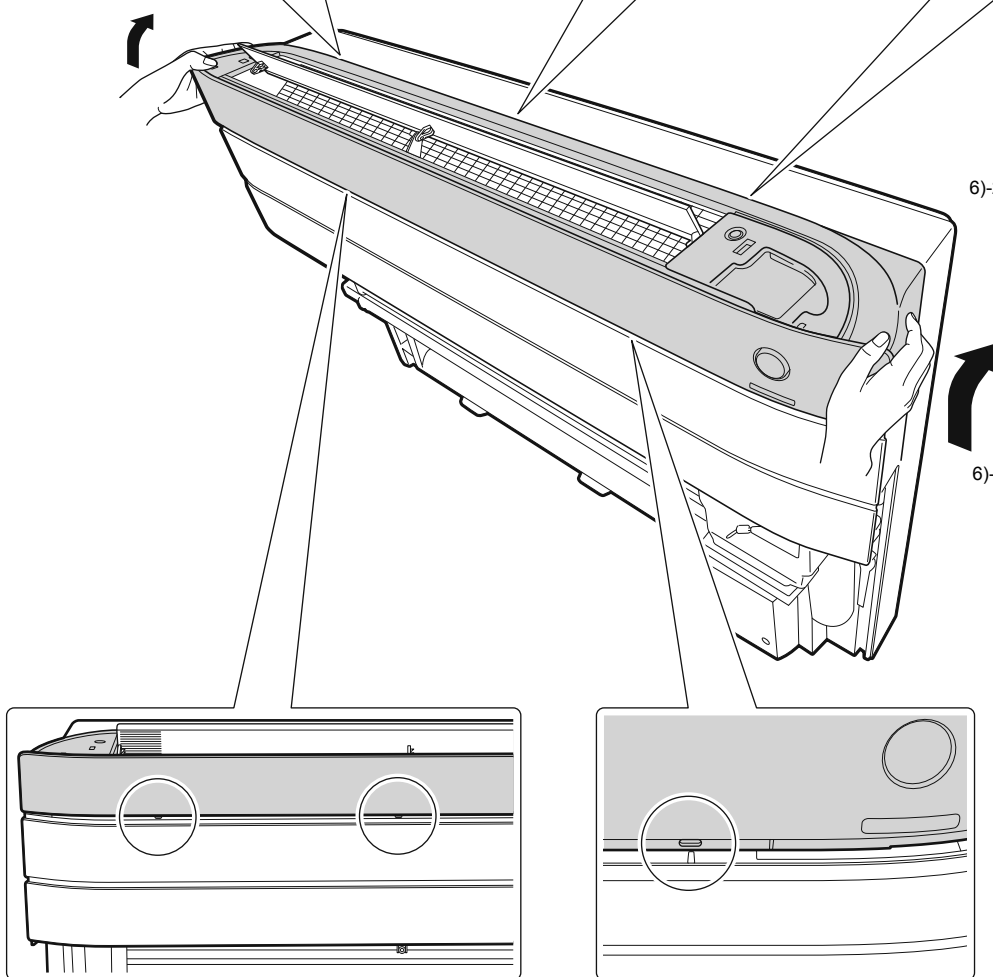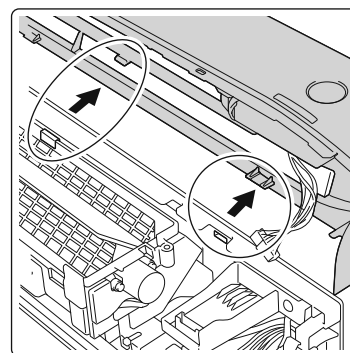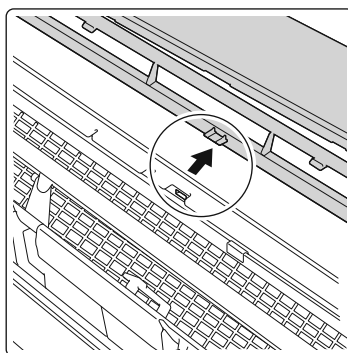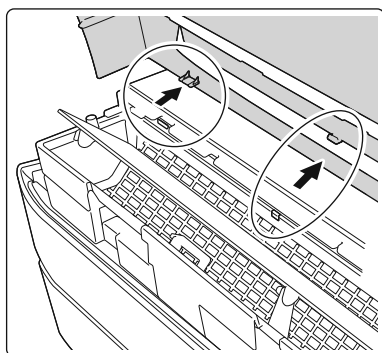


6)-2. Remove the air outlet cover while pulling the 5 tabs inside the air outlet cover.


6)-1. Remove the air outlet cover while lifting the 3 tabs on the upper radiant panel.

Indoor Unit Installation

- 7) Remove the fixing screws (2 pcs.), press the tabs (3 positions) using a flathead screwdriver, and remove the upper casing.
- 8) Remove the fixing screw (1 pc.) of both side, press the tabs (2 positions) using a flathead screwdriver, and remove the side casing on the pipe port cover removing side for the piping.

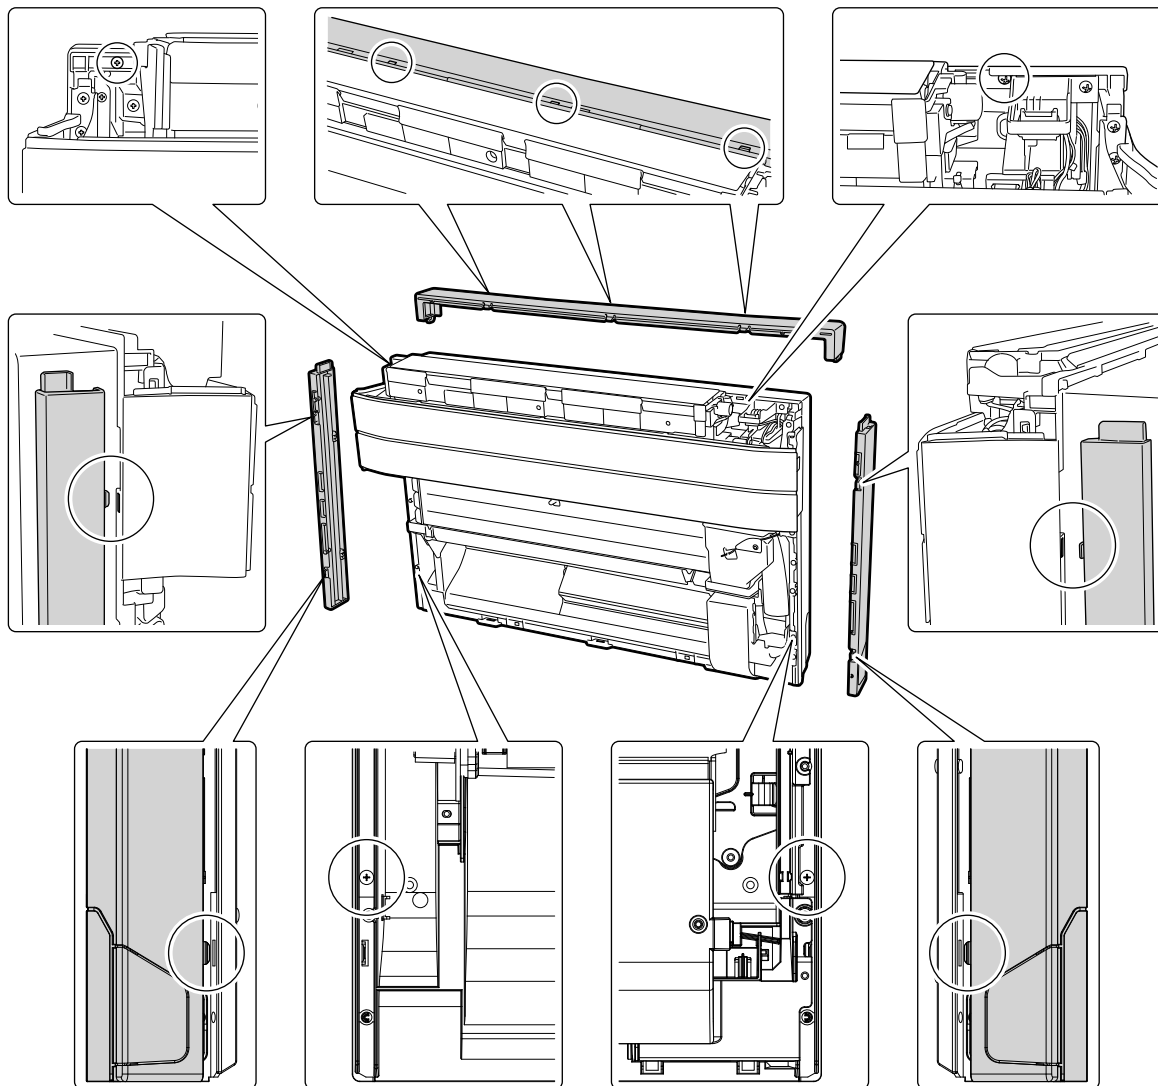

- 9) Remove the pipe port cover for the piping with reference to the slit.

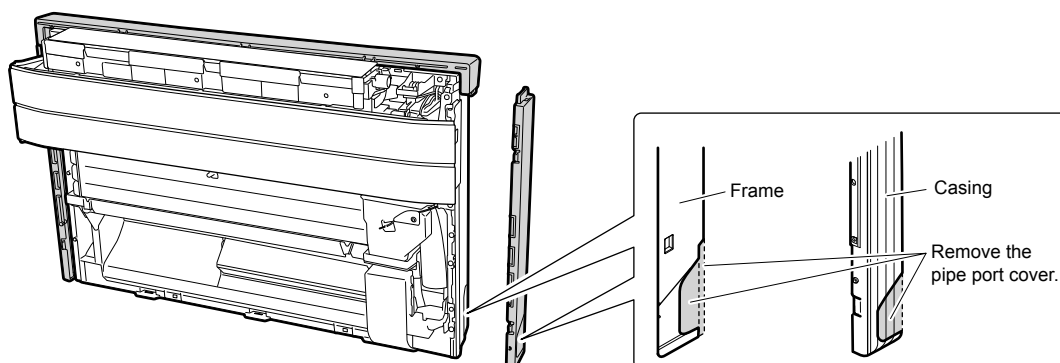

⚠ CAUTION


- Remove either the left or right pipe port cover depending on which side the piping is located.

- 10) After removing a pipe port cover, return the casing, air outlet cover, harness for receiver, service lid, and screw covers to their original positions.

Indoor Unit Installation

Connecting the drain hose to the VP pipe, and hanging the indoor unit on the mounting plate


- 1) Use commercial rigid polyvinyl chloride pipe (general VP 20 pipe, outer diameter 26 mm, inner diameter 20 mm) for the drain pipe.
- 2) The drain hose (outer diameter 18 mm at connecting end, 220 mm long) is supplied with the indoor unit. Prepare the drain pipe picture below position.
- 3) The drain pipe should be inclined downward so that water will flow smoothly without any accumulation. (Should not be trap.)
- 4) Insert the drain hose to this depth so it won't be pulled out of the drain pipe.
- 5) Insulate the indoor drain pipe with 10 mm or more of insulation material to prevent condensation.
- 6) Pour some water into the drain pan to check the water flows smoothly.

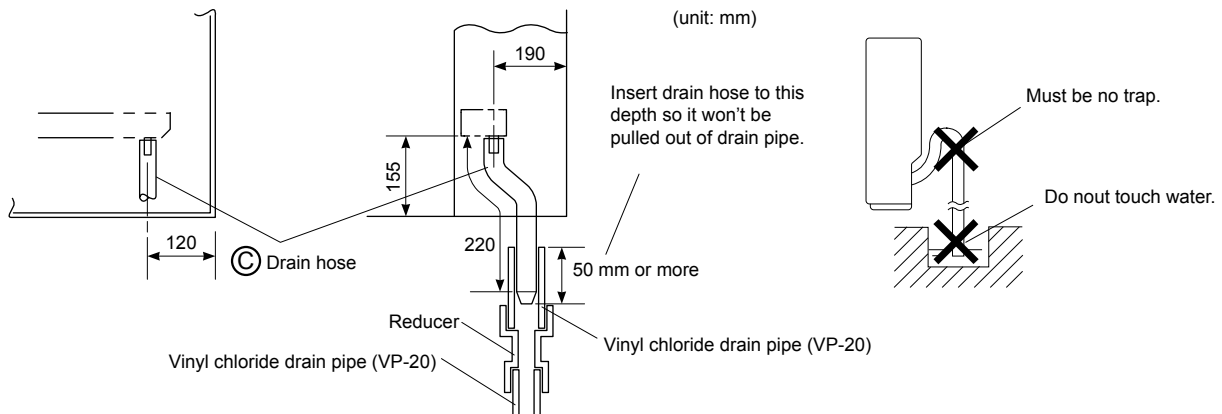

CAUTION

- Use polyvinyl chloride adhesive agent for gluing. Failure to do so may cause water leakage.

- 7) Hang the unit on the mounting plate, and fix the indoor unit on the wall with screws in 2 locations. (field supply: M4 × 25L)

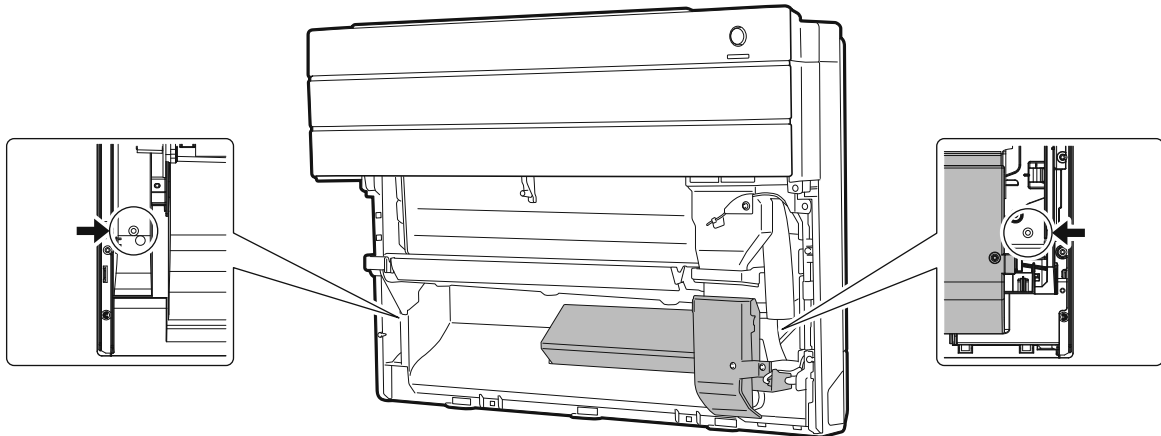


CAUTION

- Be sure to fix the indoor unit to the wall firmly with screws. Failure to fix the indoor unit with screws may result in it falling off the wall.

Refrigerant Piping Work

1. Removing the drip proof cover


- Take out 1 screw and remove the drip proof cover.

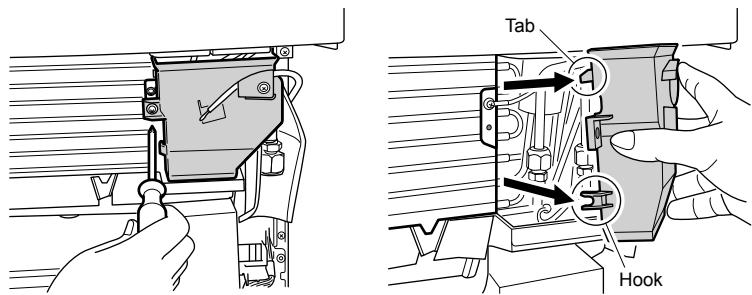

- Use the holding tape attached to the unit to temporarily fix the drip proof cover to the side of the unit.


2. Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.

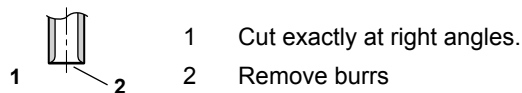


Flaring

Set exactly at the position shown below.



	Flare tool for R410A	Conventional flare tool	
	Clutch-type	Clutch-type (Ridgid-type)	Wing-nut type (Imperial-type)
A	0-0.5 mm	1.0-1.5 mm	1.5-2.0 mm

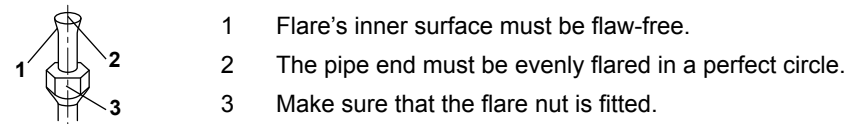

- 1 Flare's inner surface must be flaw-free.
- 2 The pipe end must be evenly flared in a perfect circle.
- 3 Make sure that the flare nut is fitted.

⚠ WARNING

- Do not use mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Do never install a drier to this R410A unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.


Refrigerant Piping Work

3. Refrigerant piping

⚠ CAUTION

- Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.

Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

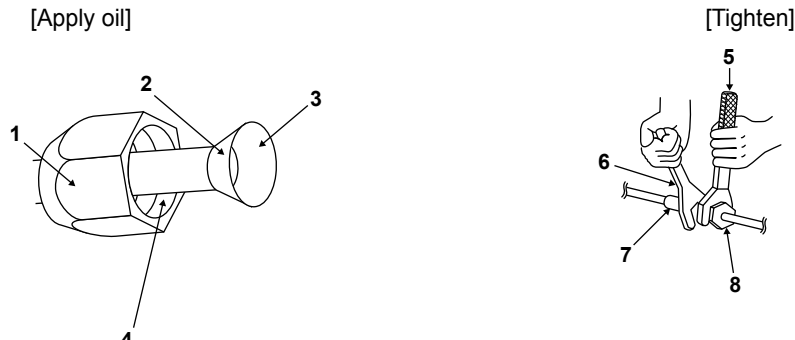

- | | |
|--|-----------------|
| 1 Flare nut | 5 Torque wrench |
| 2 Do not apply refrigeration oil to the outer surface. | 6 Spanner |
| 3 Apply refrigeration oil to the inner surface of the flare. | 7 Piping union |
| 4 Do not apply refrigeration oil to the flare nut.
Avoid tightening with over torque. | 8 Flare nut |

Flare nut tightening torque		
Gas side		Liquid side
3/8 inch	1/2 inch	1/4 inch
32.7~39.9 N·m (333-407 kgf·cm)	49.5~60.3 N·m (505-615 kgf·cm)	14.2~17.2 N·m (144-175 kgf·cm)


Caution on piping handling

- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

Selection of copper and heat insulation materials

- When using commercial copper pipes and fittings, observe the following:
 - 1) Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052 W/mK (0.035 to 0.045 kcal/mh°C)
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.

- | | |
|---------------------|--------------------------|
| 1 Inter-unit wiring | 4 Gas pipe insulation |
| 2 Gas pipe | 5 Liquid pipe insulation |
| 3 Liquid pipe | 6 Finishing tape |

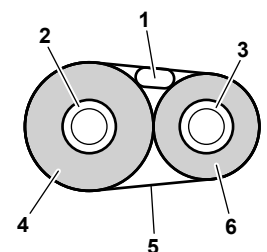

Refrigerant Piping Work

2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side		Liquid side	Gas pipe thermal insulation		Liquid pipe thermal insulation
25/35 class	50 class	O.D. 6.4 mm	25/35 class	50 class	I.D. 8-10 mm
O.D. 9.5 mm	O.D. 12,7 mm		I.D. 12-15 mm	I.D. 14-16 mm	
Minimum bend radius			Thickness 10 mm Min.		
30 mm or more	40 mm or more	30 mm or more			
Thickness 0.8 mm (C1220T-O)					


3) Use separate thermal insulation pipes for gas and liquid refrigerant pipes.

5. Purging air

- For the air purging procedures, please refer to the outdoor unit's installation manual.

6. Checking for gas leakage


- When the refrigerant piping connection is complete, check the air purge and gas leakage.
- Check for any gas leakage from the section connected to the radiant panel that is connected at the time of shipping.

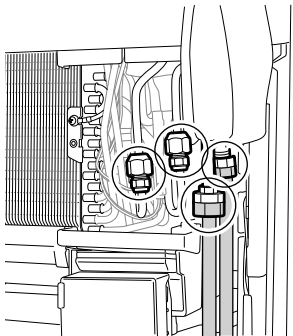

7. Finishing the connecting section of the refrigerant pipe

- When no gas leakage is detected, finish work on the connecting section of the refrigerant piping.

- 1 Refrigerant pipe
- 2 Slit
- 3 Tape
- 4 ㊦ Insulation sheet (2)
- 5 ㊦ Insulation sheet (1)

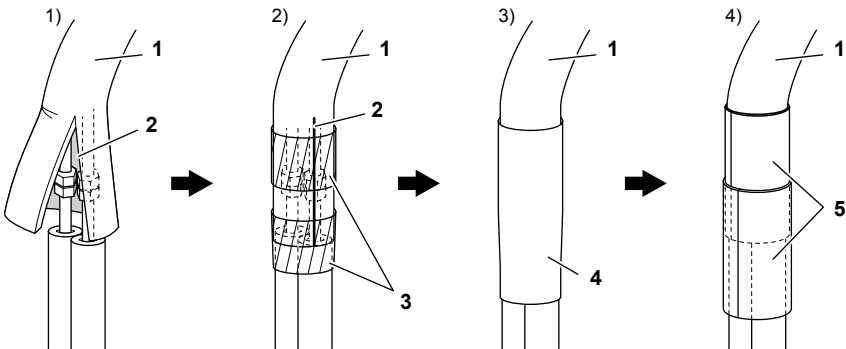


⚠ CAUTION

- Insulate the joint of the pipes securely.
Incomplete insulation may lead to water leakage.
- Push the pipe inside so it does not place undue force on the front grille.

Wiring

- 1) Open the service lid.
- 2) Strip wire ends (15 mm).
- 3) Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.
- 4) Connect the earth wires to the corresponding terminals.
- 5) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 6) Shape the wires so that the service lid fits securely, then close service lid.

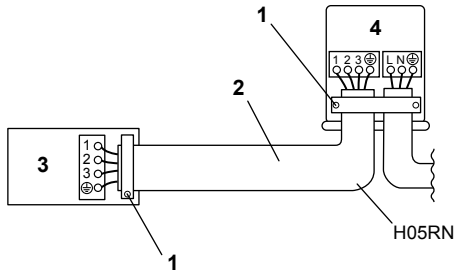


- 1 Firmly fix the wires with the terminal screws.
- 2 When wire length exceeds 10 m, use 2.0 mm diameter wires
- 3 Indoor unit
- 4 Outdoor unit

⚠ WARNING

- Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

Wiring


Unified Wiring Diagram Legend			
For applied parts and numbering refer to the wiring diagram sticker supplied on the unit. Part numbering is realized by Arabic numbers in ascending order for each part and is represented in the overview below by symbol ^{part} in the part code.			
	: CIRCUIT BREAKER		: PROTECTIVE EARTH
	: CONNECTION		: PROTECTIVE EARTH (SCREW)
	: CONNECTOR		: RECTIFIER
	: EARTH		: RELAY CONNECTOR
	: FIELD WIRING		: SHORT CIRCUIT CONNECTOR
	: FUSE		: TERMINAL
	: INDOOR UNIT		: TERMINAL STRIP
	: OUTDOOR UNIT		: WIRE CLAMP
BLK : BLACK	GRN : GREEN	PNK : PINK	WHT : WHITE
BLU : BLUE	GRY : GREY	PRP, PPL : PURPLE	YLW : YELLOW
BRN : BROWN	ORG : ORANGE	RED : RED	
A*P : PRINTED CIRCUIT BOARD	PS : SWITCHING POWER SUPPLY		
BS* : PUSH BUTTON ON / OFF, OPERATION SWITCH	PTC* : THERMISTOR PTC		
BZ, H*O : BUZZER	Q* : INSULATED GATE BIPOLAR TRANSISTOR (IGBT)		
C* : CAPACITOR	Q*DI : EARTH LEAK CIRCUIT BREAKER		
AC*, CN*, E*, HA*, HE, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A, K*R_* : CONNECTION, CONNECTOR	Q*L : OVERLOAD PROTECTOR		
D*, V*D : DIODE	Q*M : THERMO SWITCH		
DB* : DIODE BRIDGE	R* : RESISTOR		
DS* : DIP SWITCH	R*T : THERMISTOR		
E*H : HEATER	RC : RECEIVER		
F*U, FU* (FOR CHARACTERISTICS REFER TO PCB INSIDE YOUR UNIT) : FUSE	S*C : LIMIT SWITCH		
FG* : CONNECTOR (FRAME GROUND)	S*L : FLOAT SWITCH		
H* : HARNESS	S*NPH : PRESSURE SENSOR (HIGH)		
H*P, LED*, V*L : PILOT LAMP, LIGHT EMITTING DIODE	S*NPL : PRESSURE SENSOR (LOW)		
HAP : LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S*PH, HPS* : PRESSURE SWITCH (HIGH)		
HIGH VOLTAGE : HIGH VOLTAGE	S*PL : PRESSURE SWITCH (LOW)		
IES : INTELLIGENT EYE SENSOR	S*T : THERMOSTAT		
IPM* : INTELLIGENT POWER MODULE	S*W, SW* : OPERATION SWITCH		
K*R, KCR, KFR, KHuR, K*M : MAGNETIC RELAY	SA*, F1S : SURGE ARRESTOR		
L : LIVE	SR*, WLU : SIGNAL RECEIVER		
L* : COIL	SS* : SELECTOR SWITCH		
L*R : REACTOR	SHEET METAL : TERMINAL STRIP FIXED PLATE		
M* : STEPPER MOTOR	T*R : TRANSFORMER		
M*C : COMPRESSOR MOTOR	TC, TRC : TRANSMITTER		
M*F : FAN MOTOR	V*, R*V : VARISTOR		
M*P : DRAIN PUMP MOTOR	V*R : DIODE BRIDGE		
M*S : SWING MOTOR	WRC : WIRELESS REMOTE CONTROLLER		
MR*, MRCW*, MRM*, MRN* : MAGNETIC RELAY	X* : TERMINAL		
N : NEUTRAL	X*M : TERMINAL STRIP (BLOCK)		
n = *, N = * : NUMBER OF PASSES THROUGH FERRITE CORE	Y*E : ELECTRONIC EXPANSION VALVE COIL		
PAM : PULSE-AMPLITUDE MODULATION	Y*R, Y*S : REVERSING SOLENOID VALVE COIL		
PCB* : PRINTED CIRCUIT BOARD	Z*C : FERRITE CORE		
PM* : POWER MODULE	ZF, Z*F : NOISE FILTER		

Half Concealed Installation

Only items peculiar to this installation method are given here. See **Exposed Installation** for additional instructions.


1. Opening a wall hole for half concealed installation

- Drill a wall hole of the size shown in the illustration.

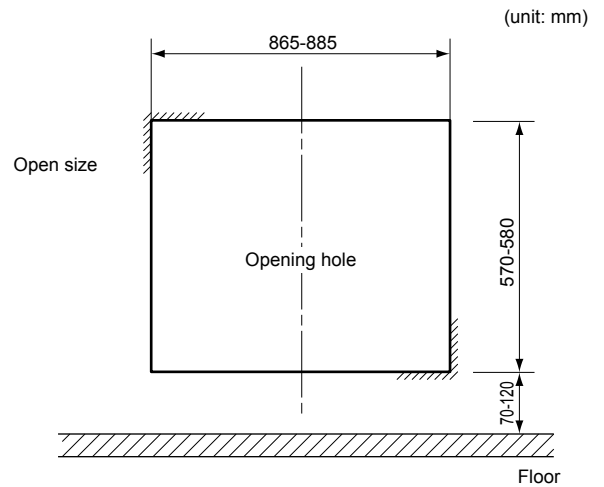

2. Installation of supplemental plate for attaching the unit

- The rear of the unit can be fixed with screws at the supplemental plate shown in the illustration. Be sure to install the supplemental plate in accordance with the depth of the inner wall.

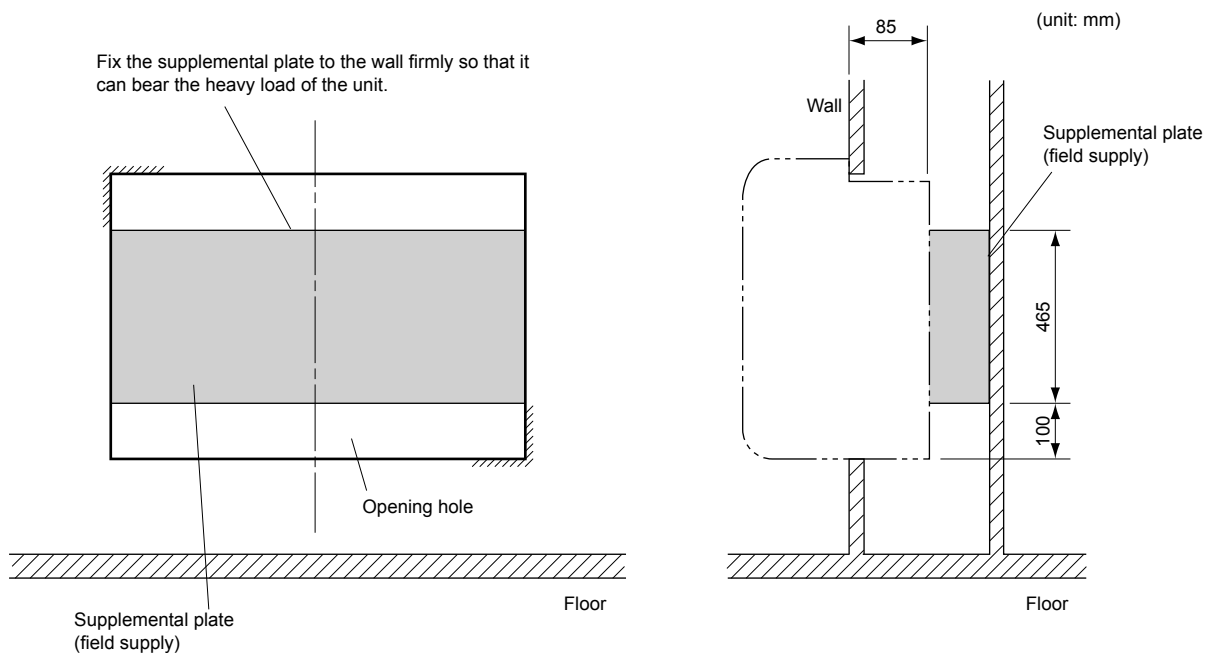


Half Concealed Installation

3. Refrigerant piping


- Refer to Shaping the refrigerant pipe (page 11) for details.

Hole location

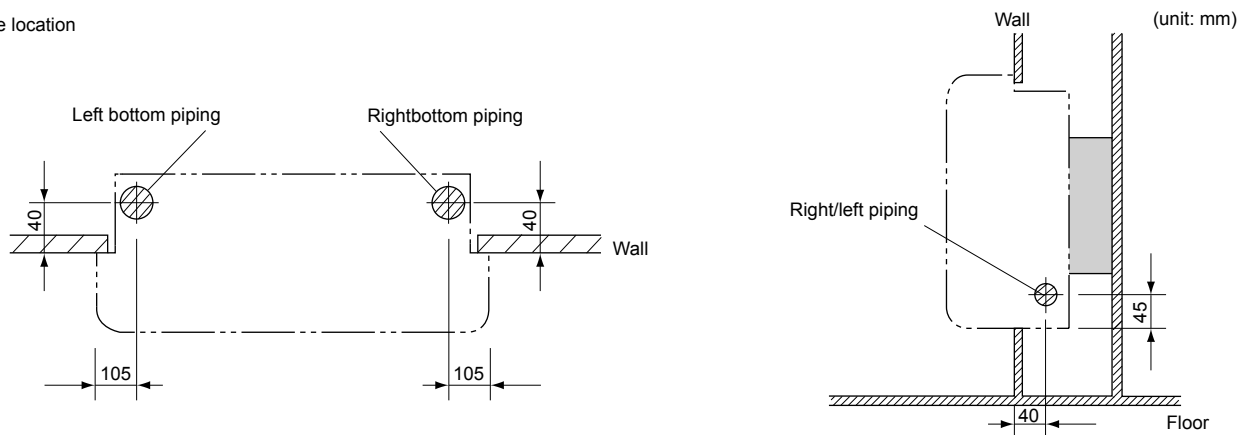

4. Installing indoor unit

- 1) Remove front panel, air filters, front grille, air outlet cover, and three casings.
- 2) Attach the indoor unit to the wall and secure using screws in 4 locations. (field supply: M4 × 25L)

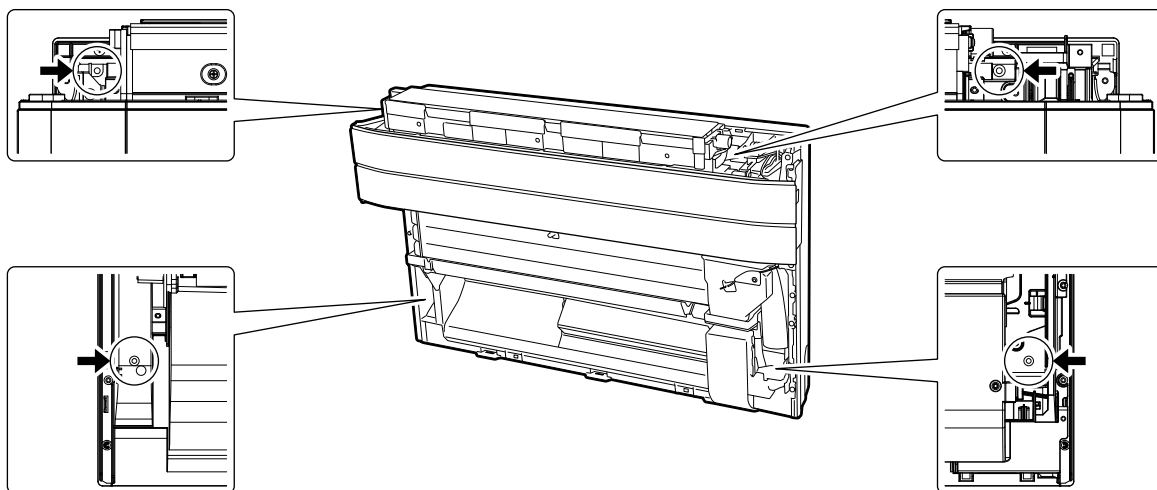

- 3) Using the reverse order from the installation, install air outlet cover, front grille, air filters, and front panel.

Trial Operation and Testing

1. Trial operation and testing

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 For trial operation, make sure to perform either COOL or HEAT operation, and RADIANT operation.

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.
 - 1) Trial operation may be disabled in either mode depending on the room temperature. Use the remote controller for trial operation as described below.
 - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
 - 3) For protection, the system disables restart operation for 3 minutes after it is turned off.
- 1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.
- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

Trial operation from remote controller

- 1) Press "ON/OFF" button to turn on the system.
- 2) Press "TEMP" button (2 locations) and "MODE" button at the same time.
- 3) Press "TEMP" button and select "?".
- 4) Press "MODE" button.
- 5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press "ON/OFF" button.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air. Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	
The radiant panel is not cooled during COOL operation. The radiant panel is not heated during HEAT operation.	Incomplete cooling/heating function	
The radiant panel is heated during RADIANT operation.	Incomplete radiant function	

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2017 Daikin